

MONTEER 8000S V2.0 USER MANUAL

ACCESSORY/STRUCTURE









⊡•∻€ =(•~) USB-C Cable



HOW TO INSTALL



3



Battery pack

3mm Hex





HOW TO INSTALL BATTERY PACK








(5)









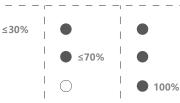



-


SWITCHING THE LIGHTING MODE

| Fully charged |

Long press power button to turn on/off

Charging

When you turn the light on, it lights up in the last lighting mode you used. (Mode memory function)

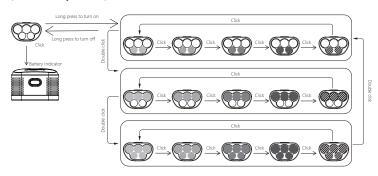

LUMENS/RUN TIME


MODE	BRIGHTNESS	ECO	LOW	MID	HIGH	FLASH
		400	900	1700	3200	0-900
	L h:min	32:00	15:00	09:00	04:00	16:00
		600	1400	2600	4800	0-1400
	L h:min	22:00	11:00	05:30	02:10	11:30
		1000	2400	4400	8000	0-2400
	L h:min	12:00	06:30	03:25	01:30	07:00

BATTERY FEATURES

High capacity battery pack with 4*21700 Li-ion battery cells 7.2V 10 Ah. Multiple circuit protections for safety use.

High quality fireproof PC material for shell.

Type-C charging & discharging integrated interface for 10w/18w fast output.

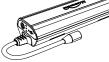

BATTERY INDICATOR

When the light is off, press the power button to display the remaining power.

 \bigcirc FLASH RED 0%-10%


GREEN RED 11%-30% 31%-100%




HOW TO RECHARGE

HOW TO PAIR


\land WARNING

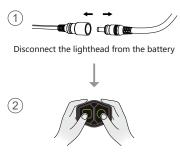

Press the two buttons at the same time until the indicator light flashes

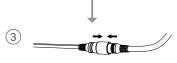


Reconnect the lighthead to the battery

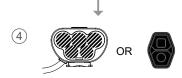



Pairing is successful: the lighthead flashes once or the indicator light stops flashing

*The M-REMOTE can only be paired with one device. To pair a new device, please repeat the operation steps above.

HOW TO USE THE M-REMOTE

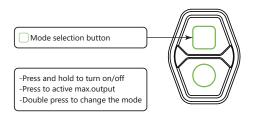

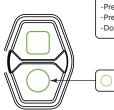

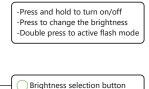

OPTIONAL PARTS





Helmet mount

TTA front mount

*Adaptable accessories (sold separately)



EN WARRANTY

The Magicshine lighting system is warrantied for 24 months from the date of purchase.

If you register the lighting system on the Magicshine website you will receive a bonus 6 month warranty.

Battery packs and AC adapters have a 6 month warranty, however, there is no bonus warranty available.

The warranty is limited to defects in material and workmanship on the lighting system itself, the battery pack and the AC adapter.

The warranty is only valid if the affected parts have not been tampered with and there is no intentional damage. Please keep your proof of purchase in a safe place. Proof of purchase must be presented in the event of any claim. Please contact the specialist retailer from whom you purchased the device for complaint or warranty claim.

Alternatively, you can send your complaint or claim directly to Magicshine at

Tel: (+86) 755-295 536 69 Fax: (+86)755-275 897 77

E-mail: support@magicshine.com (order from Magicshine.com online store)

service@magicshine.com (order from other sales channels)

In the event of a justified warranty claim and delivery of a replacement device, you will only be entitled to a model available when replacing. The manufacturer retains the right to make technical modifications.

ANSI FL 1 STANDARD

