

# MONTEER 8000S USER MANUAL

### ACCESSORY/STRUCTURE

 




Handlebar mount

0

Nylon strap



3mm Hex

MONTEER 8000S


USB-C Cable

# HOW TO INSTALL







 



# HOW TO INSTALL BATTERY PACK







 

 


### **BATTERY FEATURES**

High capacity battery pack with 4\*21700 Li-ion battery cells 7.2V 10 Ah. Multiple circuit protections for safety use.

High quality fireproof PC material for shell.

 Type-C charging & discharging integrated interface for 10w/18w fast output.



# BATTERY INDICATOR


When the light is off, press the power button to display the remaining power.

FLASH RED 0%-5%





# HOW TO RECHARGE

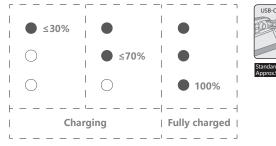


# USB-C OCTO Standard charging time Approx.9.Shrs (SV 2A)

## SWITCHING THE LIGHTING MODE

Click power button to turn on, hold 1.5s to turn off

When you turn the light on, it lights up in the last lighting mode you used. (Mode memory function)

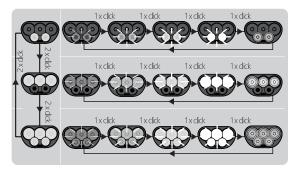

# LUMENS/RUN TIME

MODE	BRIGHTNESS	ECO	LOW	MID	HIGH	FLASH
		400	900	1700	3200	0-900
	L h:min	32:00	15:00	09:00	04:00	16:00
		600	1400	2600	4800	0-1400
	L h:min	22:00	11:00	05:30	02:10	11:30
		1000	2400	4400	8000	0-2400
	L h:min	12:00	06:30	03:25	01:30	07:00

#### **OPTIONAL PARTS**



Helmet mount



TTA front mount

\*Adaptable accessories (sold separately)

#### \land WARNING





## **EN** WARRANTY

The Magicshine lighting system is warrantied for 24 months from the date of purchase.

If you register the lighting system on the Magicshine website you will receive a bonus 6 month warranty.

Battery packs and AC adapters have a 6 month warranty, however, there is no bonus warranty available.

The warranty is limited to defects in material and workmanship on the lighting system itself, the battery pack and the AC adapter.

The warranty is only valid if the affected parts have not been tampered with and there is no intentional damage. Please keep your proof of purchase in a safe place. Proof of purchase must be presented in the event of any claim. Please contact the specialist retailer from whom you purchased the device for complaint or warranty claim.

Alternatively, you can send your complaint or claim directly to Magicshine at

Tel: (+86) 755-295 536 69 Fax: (+86)755-275 897 77 E-mail: support@magicshine.com (order from Magicshine.com online store)

service@magicshine.com (order from other sales channels)

In the event of a justified warranty claim and delivery of a replacement device, you will only be entitled to a model available when replacing. The manufacturer retains the right to make technical modifications.

#### ANSI FL 1 STANDARD

