



MJ-902S UTILISATEUR





ACCESSORY/STRUCTURE



MJ-902S



Aero bar compatible strap







3mm Hex(Hexagone)




Nylon strap

1.5 -d•<-b



Micro USB Cable



SWITCHING THE LIGHTING MODE


Modes Switch:


From bicycle light mode to E-bike light mode:

Long press power button for 8 seconds until it flashes.

From E-bike light mode to bicycle light mode:

Long press power button for 8 seconds until it lights constantly.

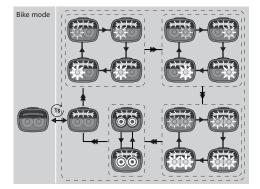

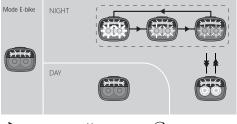

► 1 x Click



2 x clicks (1s) Maintenir 1 seconde


LUMENS/BURNING TIME

Bike mode


BRIGHTNESS	DRL	/	/	/
LUMENS	25	/	/	/
L. h:min	42:00	/	/	/
CONSTANT	ECONOMICAL	LOW	MID	HIGH
2 ³¹ /2 LUMENS	450	1000	1500	3000
b:min	14:00	06:00	03:00	01:30
LUMENS	250	600	900	1500
b:min	20:00	11:00	06:30	03:00
LUMENS	250	600	900	1500
b:min	20:00	11:00	06:30	03:00
FLASH	FLASH 1	FLASH 2		
LUMENS	0-1500	0-900	/	/
h:min	08:00	10:00	/	

Mode E-bike

NIGHT	нідн	MID	LOW	FLASH
ンパン LUMENS	3000	1500	1000	0-1000
DAY	DRL			
LUMENS	25	/	/	/



HOW TO RECHARGE



BATTERY INDICATOR




RED FLASH FLASH ROUGE 0%-10%




RED ROUG 11%-30%



HOW TO INSTALL

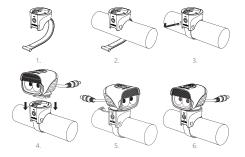

HOW TO INSTALL BATTERY PACK

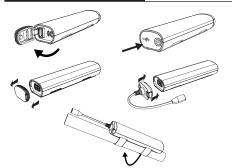

SPECIFICATION

ANSI FL 1 STANDARD





EN WARRANTY

The Magicshine lighting system is warrantied for 24 months from the date of purchase.

If you register the lighting system on the Magicshine website you will receive a bonus 6 month warranty. Battery packs and AC adapters have a 6 month warranty, however, there is no bonus warranty available.

The warranty is limited to defects in material and workmanship on the lighting system itself, the battery pack and the AC adapter.

The warranty is only valid if the affected parts have not been tampered with and there is no intentional damage. Please keep your proof of purchase in a safe place. Proof of purchase must be presented in the event of any claim. Please contact the specialist retailer from whom you purchased the device for complaint or warranty claim.

Alternatively, you can send your complaint or claim directly to Magicshine at

Tel: (+86) 755-295 536 69 Fax: (+86)755-275 897 77

E-mail: support@magicshine.com (order from Magicshine.com online store) service@magicshine.com (order from other sales channels)

In the event of a justified warranty claim and delivery of a replacement device, you will only be entitled to a model available when replacing. The manufacturer retains the right to make technical modifications.

Customer Information
Name:Tel:
E-Mail:
Address:Zip:
Product Information
Company Name / Website of the Seller:
Product Name:
Date of Purchase: Contact:
Tel: E-mail:
Address: Zip:
Product Seriel Number
Note: Register on Website to Gain 6 Months Extra Warranty Rights. • Proof of purchase is required when obtaining warranty service.
DO NOT return suspected defective parts directly to MAGICSHINE or the seller.
 Ue tective parts must only be sent to the seller you purchased your product from. Please context them beforehend to confirm accentence.